

## CD-i Gamepad Adapter Instruction Sheet

 
### Introduction

The CD-i Gamepad Adapter is a cable designed to connect an analog PC joystick or gamepad to a CD-Interactive (CD-i) player. The cable handles the necessary calibration of the PC joystick or gamepad, and converts the data from the joystick or gamepad to a format understood by the CD-i player. With the CD-i Gamepad Adapter, you can enjoy CD-i gaming with the controller of your choice.

### Installation

1. Turn off your CD-i player. NEVER plug in or remove the CD-i Gamepad Adapter while the CD-i player is on.
2. Connect the CD-i Gamepad Adapter to the joystick/gamepad via the 15 pin D-shaped connector.
3. Plug the CD-i Gamepad Adapter mini-DIN connector into the INPUT connector on your CD-i player.
4. Check to make sure that your joystick/gamepad directional control is centered. This is necessary for proper calibration.
5. Turn on your CD-i player. Wait a couple of seconds for the joystick/gamepad to calibrate before moving the directional control.

### Controls

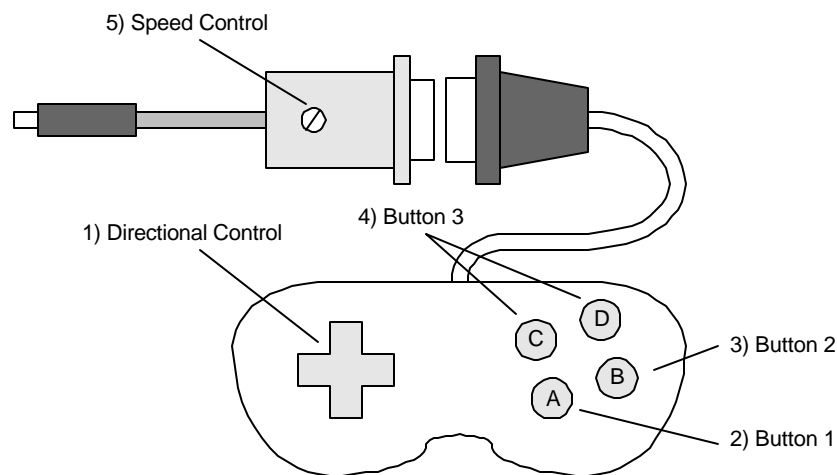

- 1) Gamepad Directional Control - This controls the movement of the cursor on the screen.
- 2) Gamepad "A" Button or Button 1 - This control functions as Button 1.
- 3) Gamepad "B" Button or Button 2 - This control functions as Button 2.
- 4) Gamepad "C" and "D" Buttons or Buttons 3 and 4 (Optional)- These controls each function as Button 3.

- 5) CD-i Gamepad Adapter Speed Control - This control increases or decreases the maximum speed of the cursor on the screen.

### **Troubleshooting**

**Q:** My CD-i Gamepad Adapter doesn't work at all.

**A:** Check all of the connections on your CD-i player and on the joystick/gamepad. Turn off your CD-i machine and restart it. If that does not help, try a different joystick/gamepad.

**Q:** The cursor moves across the screen by itself.

**A:** The unit did not calibrate properly. Shut off the CD-i player, center your joystick/gamepad, and restart the CD-i player.

**Q:** The cursor moves across the screen too quickly or too slowly.

**A:** The speed of the cursor can be adjusted using the speed control on the CD-i Gamepad Adapter. Turn it counterclockwise to slow the cursor, clockwise to speed it up.

**Q:** The speed control will not turn.

**A:** The speed control can sometimes be difficult to turn. Try using a small flathead screwdriver to turn it. Do NOT pry on the speed control knob to try to loosen it. This can damage the CD-i Gamepad Adapter.

**Q:** The throttle control on my joystick/gamepad does not seem to do anything.

**A:** Throttle controls are not supported by the CD-i Gamepad Adapter.

**Q:** My digital joystick/gamepad doesn't work (I.E. Microsoft Sidewinder).

**A:** The Microsoft Sidewinder and other digital controllers will not work with the CD-i Gamepad Adapter. These types of controllers send digital information over the joystick inputs that are not understood by the CD-i Gamepad Adapter.

**Q:** I need a Button 3 for my game, but my gamepad only has two buttons.

**A:** Pressing Buttons 1 and 2 simultaneously can emulate a third button.